JB-151TH, JB-151TH-AN
Wireless temperature and humidity sensor with thermostat function

The product is a component of JABLOTRON systems and, in combination with a control panel, is designed for zone temperature control and ventilation using built-in temperature and humidity measurement and, in combination with an external sensor, also for measuring floor temperature.

The product combines the features of an alarm system with temperature comfort control in buildings, enabling automatic functions that respond to system events, such as switching to economy mode when users are absent, turning off the heating when a window is opened, and so on.

For the product to function properly, the system must be registered with the JABLOTRON Cloud (some functions may be subject to a fee).

The product is compatible with JA-103K and JA-107K.

The product is intended for installation by a trained technician with a valid Jablotron certificate.

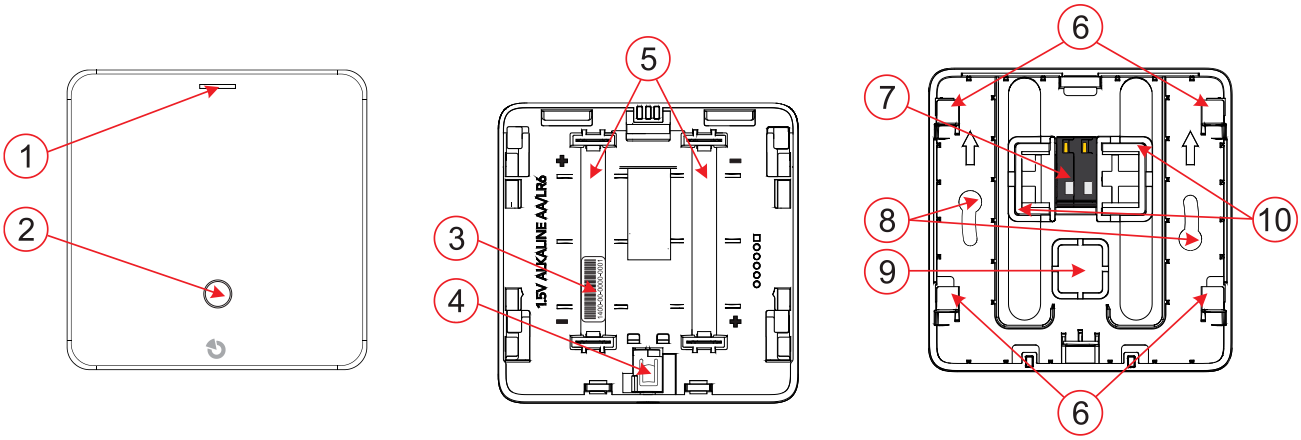


***Fig. 1**: Description of the internal and external parts of the product*

***1** – LED indicator; **2** – capacitive button; **3** – serial number; **4** – locking mechanism, **5** – battery holder; **6** – rear part latches; **7** – terminal block; **8** – screw holes; **9** – break-out square; **10** – side terminal block holders*

Installation

1. Turn the locking mechanism (4) counterclockwise and open the product.
2. In the rear part, it is necessary to break off the side terminal block holders (10) to make space for the batteries.
3. If connecting an external sensor, connect the wires to the terminal block (7) on the rear plastic and attach the rear part to the wall using two screws (8).
4. Then insert the batteries into the rear part of the front part, place the top section into the latches and secure the product by moving it downwards.
5. Secure by turning the locking mechanism clockwise. Ensure that the batteries are inserted with the correct polarity.

Next, follow the installation manual for the control panel.

Basic procedure:

1. In the ***F-Link*** programme, select the desired position in the ***Device*** tab and select ***Enroll*** to activate learning mode.
2. Insert the batteries or enter the seriál number (3). Enter all digits (seriál numer format: 1400-00-0000-0001).
3. Once the thermostat appears in the list of peripherals, set the properties in the Internal Settings tab.




***Fig. 2**: Surface installation*

Product function diagram

The product allows you to control heating, cooling or ventilation using three PG outputs of the control unit in On/Off mode, see the figure below.

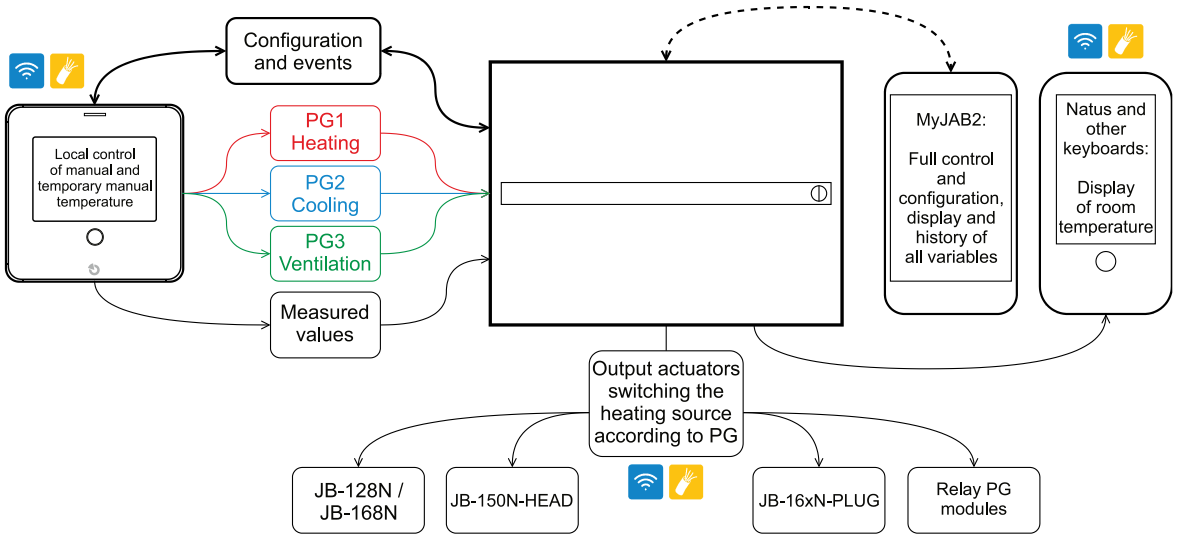


***Fig. 3**: General configuration of heating, air conditioning and ventilation control*

JABLOTRON a.s.
Pod Skalkou 4567/33 | 46601 | Jablonec n. Nisou
Czech Republic | www.jablotron.com

JB-151TH, JB-151TH-AN
Wireless temperature and humidity sensor with thermostat function

The thermostat settings are divided into two blocks:

- **Installation:** Basic thermostat settings performed by an F-Link installation technician during installation. These settings are necessary for the product to function properly and limit user settings and functions. After performing the installation settings and registering with the JABLOTRON Cloud, the product can be handed over to the customer for use.
- **User:** The operating settings contain parameters for normal use of the product, such as the required temperatures for individual modes, hysteresis, calendar functions, etc. The settings are primarily intended for the user and are performed in MyJABLOTRON. In cases where it is necessary to hand over a product with detailed settings to the user, the user section is accessible to the installation partner in MyCOMPANY.

Internal settings in F-Link

The basic functions necessary for putting the product into operation can be set in the internal settings of the thermostat. After leaving service mode, the thermostat switches to heating mode with manual temperature setting. It thus maintains a constant temperature (20 °C by default). In this mode, the thermostat can simply maintain the desired temperature in the building, for example, until the system is fully completed and later registered on the JABLOTRON Cloud. All other functions and controls are part of the user settings in MyJABLOTRON / MyCOMPANY, see below.

Heating / cooling / ventilation modes – All three modes can be activated using the checkboxes. When activated, each mode opens up the option to select an individual PG that will switch the relevant appliance. Activating individual modes also affects the availability of user settings in MyJABLOTRON / MyCOMPANY. The heating and cooling modes do not work together. The user must manually switch between the heating and cooling seasons in MyJABLOTRON. Depending on this, the thermostat switches either the heating or cooling PG. The ventilation mode, on the other hand, works in parallel, independently of heating and cooling. The ventilation PG switches on when the humidity threshold is reached until it drops by the set hysteresis. Both parameters are part of the user settings. **Upper and lower temperature limits adjustable by the user** – the limits (0°- 40 °C) determine the range in which the user can set the desired temperature in MyJABLOTRON.

Switch to economy temperature – if the thermostat is in **Program** mode, with the selected method of securing the section to which it is assigned, it automatically shortens the comfort period of the calendar and maintains only the economy temperature. This is maintained until the calendar requires the comfort temperature again. **Floor sensor** – If the JB-TS-NTC10K floor sensor is connected, you can set a limit for the floor temperature that the thermostat will not exceed when heating (5°- 40 °C). In residential buildings, we recommend not increasing the default temperature of 29 °C, which is recommended by hygiene standards for living spaces. Exceptions may be rooms with short-term stays (e.g. bathrooms), where the maximum permissible floor temperature is 33 °C. When the limit temperature is reached, the thermostat stops heating until the temperature drops by 1°C. The floor sensor function is only a limit; for normal regulation, the thermostat uses the air temperature.

Error event declaration based on critical temperature measurement – the thermostat can declare a selected event (fault/alarm) when the set critical low or high temperature is reached from the selected temperature measurement source:

- Air and floor (the first source to reach the set temperature).
- Air (floor temperature is ignored).
- Floor (air temperature is ignored, only the external sensor is evaluated).

The event is reported by the system to the user or to the PCO. This function is suitable for preventing damage in the event of a heating system failure or for monitoring the temperature in areas where this value is critically monitored. For heating control in standard buildings, dynamic monitoring of critical temperatures can be activated (-5 °C from off mode or +10 °C to comfort mode). The values at which the thermostat reports an error event are then calculated automatically according to the user-set temperature in off mode / comfort temperature for heating mode.

PG output settings

F-Link automatically assigns and locks the on/off function to the PG outputs controlled by the thermostat. In zone heating control, each thermostat controls its own PG output, which controls the switching of the heating source in the room where the thermostat is installed (e.g. a head in a floor heating manifold, a radiator head, a relay switching electric floor heating in a room, etc.). If the system is equipped with a central heat source (boiler, heat pump), the heat source should be switched by a common PG output that copies the OR logic of the individual thermostats' PG (if at least one thermostat requests heating, the common PG copies the request; if none of the thermostats are heating, the common PG is switched off).

Blocking PG outputs

PG outputs controlled by thermostats can be blocked by various events, such as activation of device (open window), securing a section, or custom logic (blocking by another PG output). If the PG is blocked, the thermostat does not heat until the temperature drops to the value set for the off mode. When this value is reached, the thermostat overcomes the block and continues to maintain the temperature in the off mode until the block ends, when it returns to its default state.

User settings of the thermostat in MyJABLOTRON / MyCOMPANY:

For the product to function properly, the system must be registered in the JABLOTRON Cloud. The settings in the applications respect the installation settings in F-Link; only parameters for enabled operating modes are available, and the range of temperatures that can be set in the application is limited by the range enabled in the installation settings. User settings are made separately for the heating, cooling and ventilation operating modes.

Heating function settings:

Automatic switch to economy temperature: if the thermostat is in programme mode, with the selected method of securing the section to which it is assigned, it automatically shortens the comfort period of the calendar and maintains only the economy temperature. This is maintained until the calendar requires the comfort temperature again. By default, the thermostat automatically switches to economy temperature when the section is fully secured.

Hysteresis: Determines how much the temperature must drop after reaching the desired temperature for the thermostat to start heating again. Correct hysteresis setting prevents too frequent switching of the heating source. By default, the hysteresis for heating is set to 0.5°C.

Temperature correction: Allows you to manually calibrate the air temperature measured by the thermostat in cases where the thermostat is affected by an external source, such as air flow.

Floor temperature will not exceed: Display of the floor temperature limit set in the installation settings. The default value is 29°C.

Comfort temperature: The temperature that the thermostat maintains in programme operating mode at set times when a higher temperature is required (typically in the morning and evening). The default comfort temperature is set to 22°C. If automatic switching to economy temperature is active, the thermostat automatically shortens the comfort section when it is activated.

Economy temperature: The temperature maintained by the thermostat in operating mode outside the set comfort periods (typically at night or when no one is in the building). The default economy temperature is 18°C.

Off: The temperature maintained by the thermostat when it is switched to the heating function and the operating mode is turned off. For normal interiors, it is recommended that the temperature does not fall below the default setting of 12°C. Lower temperatures may lead to mould growth and other undesirable phenomena. The thermostat maintains the temperature in the off mode even when the PG for heating is blocked, for example by an open window or a longer-term securing of the section (long-term absence from the building), etc.

Cooling function settings:

Automatic switch to economy temperature: if the thermostat is in programme mode, when the selected method of securing the section to which it is assigned is selected, it automatically shortens the comfort section of the calendar and maintains only the economy temperature. This is maintained until the calendar requires the comfort temperature again. By default, the thermostat automatically switches to economy temperature when the section is fully secured.

Hysteresis: Determines how much the temperature must rise again after reaching the desired temperature for the thermostat to start cooling again. Correct hysteresis setting prevents too frequent switching of cooling. The hysteresis setting for cooling is individual and is typically higher than for heating, by default 1°C.

Comfort temperature: The temperature that the thermostat maintains in operating mode during set time periods when a lower temperature is required (typically in the afternoon and for sleeping). By default, the comfort temperature for cooling is set to 23°C. If automatic switching to the comfort temperature is active, the thermostat automatically shortens the comfort period when securing the comfort section.

Economy temperature: The temperature that the thermostat maintains in operating mode outside the set comfort periods, typically when no one is in the building, but it is desirable to prevent the interior from overheating so that it can quickly return to a comfortable temperature. The default economy cooling temperature is 25°C.

Ventilation function settings:

Ventilation switches on when relative humidity is reached: The thermostat simply switches on the assigned appliance when the set humidity threshold is reached, by default 50%. The threshold value can be set in the range from 0% (ventilation is switched on permanently) to 100% (ventilation is not switched on at all). The function is active permanently, regardless of the current thermostat settings. The function is suitable, for example, for automatic switching of the fan in the bathroom, etc.

Humidity hysteresis: Determines by how many percent the humidity must drop after the ventilation is switched on in order for the ventilation to switch off again. The default hysteresis is 5% (when the humidity reaches 50%, the thermostat switches on the ventilation and switches it off when the humidity drops to 45%).

Calendar settings:

In the calendar, you can set multiple comfort periods for each day during which the thermostat maintains the set comfort temperature. At the beginning of the comfort period, the thermostat starts heating to the desired temperature. Achieving this temperature depends on the thermal inertia of the space and the output of the heating system, so the start of the comfort period must be set well in advance to ensure that the desired temperature is reached in the required time. Calendar settings are made separately for the heating and cooling functions.

Thermostat operation

All controls are performed only in the MyJABLOTRON application in the thermostats and thermometers tab.

Seasonal function: If both functions are enabled in the installation settings, the thermostat allows you to switch between the heating and cooling functions. Switching is done manually in the application when transitioning between seasons; simultaneous operation of both modes is not possible. **Warning**: When the thermostat is switched to cooling, heating is completely deactivated, even if the temperature drops below the off mode setting. We recommend leaving the error event notification active at critically low temperatures (installation settings) so that the user is notified in time if they forget to activate the heating function.

Thermostat operating modes:

- **Calendar** – the thermostat automatically switches between comfort and economy temperatures according to the schedule set in the calendar. This mode is most suitable for economical operation of the heating system in the building. Outside of exposed times, the thermostat heats to a lower temperature, thereby reducing the operating costs of the building.

  If automatic switching to economy temperature is active, the thermostat shortens any ongoing comfort period when the section is secured and switches to economy temperature immediately upon securing. The next comfort period begins according to the calendar settings, even if the section is secured.

  In calendar mode, the current desired temperature can be changed manually in the application in case of sudden user need. The thermostat then maintains the newly set temperature until the next change in the calendar (transition from economy temperature to comfort temperature or vice versa). The temperature is then set again according to the calendar plan.

  Calendar mode is available for both heating and cooling, with individual settings for each function.

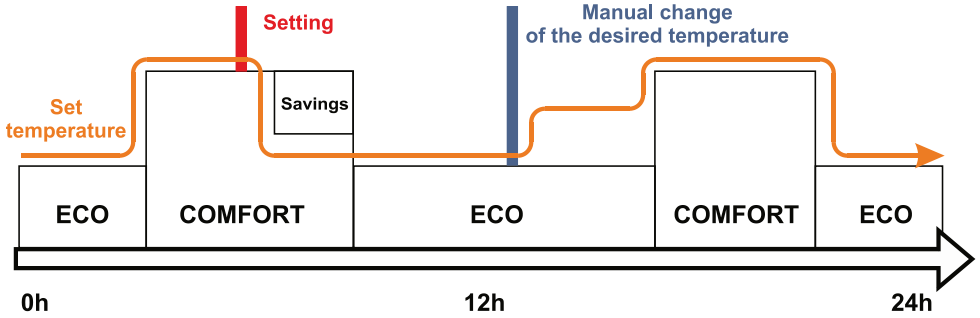


***Fig. 4**: Temperature development for individual modes and actions in the system*

- **Manual temperature** – the thermostat maintains a constant temperature set by the user. The desired temperature can only be changed in the application. The system setting does not affect the behaviour of the thermostat in this mode. Manual mode is available for both cooling and heating.

JABLOTRON a.s.
Pod Skalkou 4567/33 | 46601 | Jablonec n. Nisou
Czech Republic | www.jablotron.com

- **Off** – In heating mode, the thermostat maintains a constant temperature set for the off mode. In cooling mode, the thermostat does not maintain any temperature when switched off. The off mode is activated automatically if the relevant PG for heating or cooling is blocked by the system.

Display of current values: The thermostat reports the current measured temperature and humidity values to the application at 5-minute intervals. MyJABLOTRON displays the last known values. The application creates a graph from the room temperature values, allowing you to track the temperature history.

Optical indication

The product is equipped with an LED indicator in the upper part of the product. The intensity of the light is automatically controlled according to the ambient lighting. The LED only lights up when the capacitive button is pressed.

LED indication	Indicated function
Green light	Idle state – heated/cooled to the desired temperature
Red light	Active state – thermostat is currently heating or cooling
Red flashing	Heating/cooling is blocked
Yellow light	Thermostat malfunction (communication error with the control unit, external sensor error, internal error)
Yellow flashing	Thermostat not programmed into the system

Technical parameters

Temperature measurement range with external sensor ..... -40 to+ 125 °C (± 0.2 °C)
Operating temperature range ..... -20 to +40 °C
Humidity measurement range ..... 0–100 %
**Temperature controller class ..... I. (according to Regulation (EU) No. 813/2013)*
**Contribution of controllers to seasonal efficiency ..... ɳS = 1 % (according to Regulation (EU) No 813/2013)*
**for both parameters in configuration with control unit*
Power supply ..... 2x 1.5 V AA alkaline batteries, type LR6 (recommended BAT-1V5-AA)
Batteries are not included.
Typical battery lifetime ..... 3 years
Low battery voltage detection ..... 2.2 V
Quiescent current consumption ..... 56 µA
Maximum current consumption ..... 35 mA
IP resistance ..... IP 31
Communication frequency ..... 868.1 MHz Jablotron protocol
Communication range ..... 500 m
Max. radio frequency power ERP ..... <25 mW
Dimensions ..... 82 x 82 x 22 mm
Weight (without batteries) ..... 85.4 g
Operating humidity ..... 75 % (non-condensation)
Environment ..... Indoor general
Also complies with ..... EN 60730-1, EN IEC 62368-1, EN 50130-4, EN 55032, ETSI EN 300 220-2, EN IEC 63000
Recommended screws ..... 2x ø 3.5 mm (half-round head)

JABLOTRON a.s. declares that the product JB-151TH, JB-151TH-AN is designed and manufactured in accordance with the harmonised legislation of the European Union: Directives No.: 2014/30/EU, 2009/125/EC, 2011/65/EU, when used as intended. The original Declaration of Conformity is available at www.jablotron.com in the Downloads section.

Note: Although the product does not contain any harmful materials, do not dispose of it in the rubbish, but take it to an electronic waste collection point. More detailed information can be found at www.jablotron.com in the Downloads section.